


METER CAN BONDING


Internal and External Breaker Cabinets

Internal Breaker Cabinet

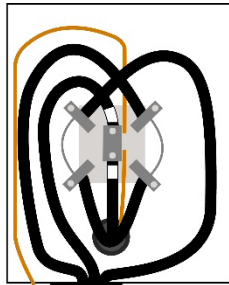


Ground wire must be landed per meter can manufacturer


#6 soft drawn copper

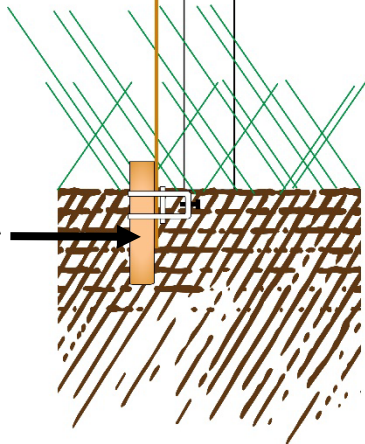

Internal Breaker Cabinet (Side View)

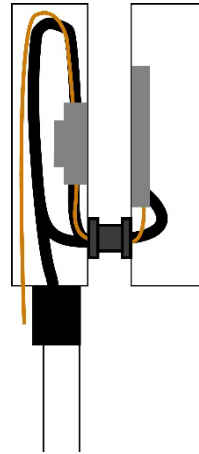


External Breaker Cabinet

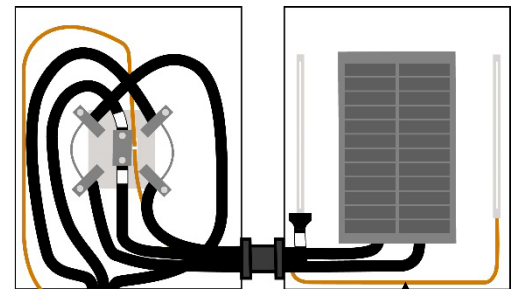

Ground wire must be landed per meter can manufacturer

#6 soft drawn copper

Ground wire must be carried through

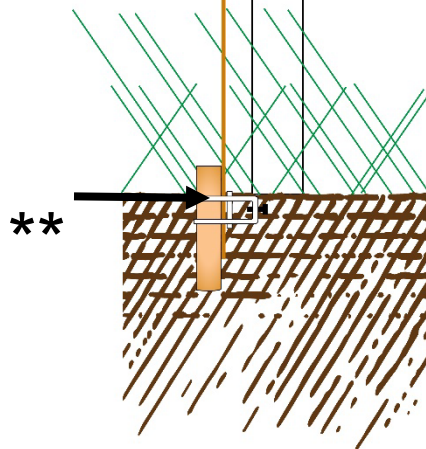

**Refer to [Installation Requirements: Rod + Pipe Electrodes](#) for ground installation